PATCH

EDGE OF PAVEMENT

LANE WIDTH

600

700
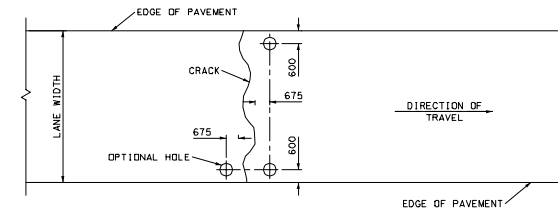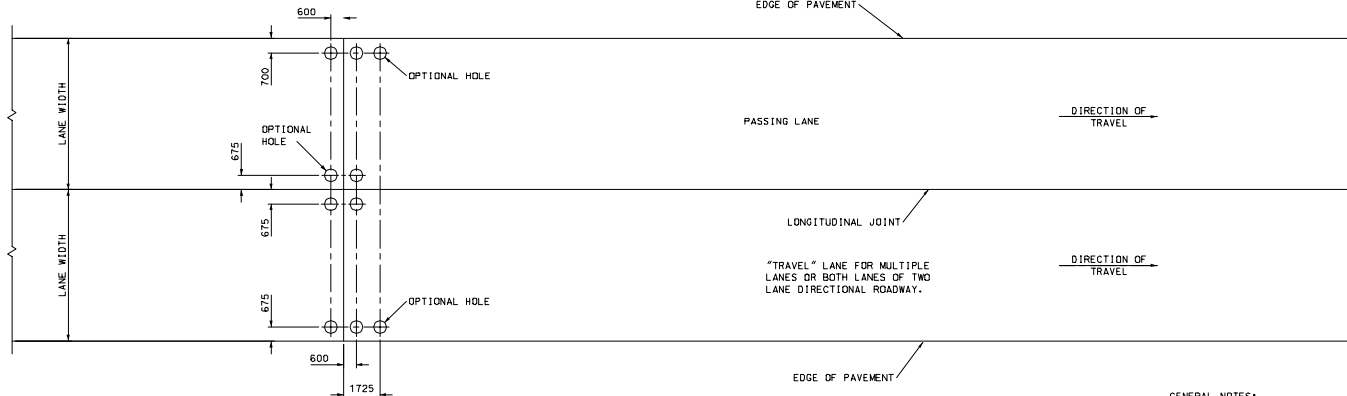
725

600

✳

DIRECTION OF TRAVEL

PATCH

EDGE OF PAVEMENT

✳ THIS HOLE SHOULD ONLY BE USED ON PATCHES EXISTING PRIOR TO CONSTRUCTION. THE HOLE SHOULD BE LOCATED CLOSE TO THE CENTER OF THE PATCH. BY USING THIS HOLE, THE TWO HOLES LOCATED AT THE SHOULDER COULD BE ELIMINATED.

PATCH

CRACK

EDGE OF PAVEMENT

LANE WIDTH

CRACK

600

675

600

OPTIONAL HOLE

675

DIRECTION OF TRAVEL

EDGE OF PAVEMENT

CRACK

JOINT

600

EDGE OF PAVEMENT

LANE WIDTH

700

OPTIONAL HOLE

OPTIONAL HOLE

675

PASSING LANE

DIRECTION OF TRAVEL

LONGITUDINAL JOINT

LANE WIDTH

675

675

OPTIONAL HOLE

"TRAVEL" LANE FOR MULTIPLE LANES OR BOTH LANES OF TWO LANE DIRECTIONAL ROADWAY.

DIRECTION OF TRAVEL

600

1725

EDGE OF PAVEMENT

JOINT

GENERAL NOTES:

ALL DIMENSIONS SHOWN ARE IN mm UNLESS OTHERWISE NOTED.